		•
* * * * * *	* * * * * * * * * * * * * * * * * * * *	* * * * *
*		*
*	SJ-E series	*
*		*
^ *	Dalam agreta et intenfere	^ *
*	Relay contact interface	*
*	Operation manual	*
*	Operation manual	*
*		*
* * * * * *	* * * * * * * * * * * * * * * * * * * *	* * * * *


SJ-E series		Page
Relay contact interface	Operation manual	1/3

1. Pin numbers & Functions of Connector (Relay contact connector:8P)

# 1-1 ) Pin numbers & functions

Pin No.	Signal	Input/output	Functions
1			Blank
2			Blank
3	COM	Out	Common Contact
4			Blank
5			Blank
6	HI	Out	a-contact, ON for HIGH data
7	OK	Out	a-contact, ON for GOOD data
8	LO	Out	a-contact, ON for LOW data


Applicable Plug:TCP0586-01-0201(Hoshiden) included. DIN 8Pin connector:Rear-panel

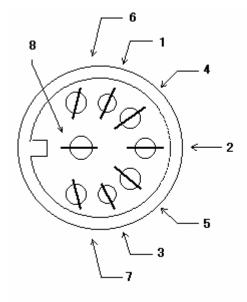

SJ-E series		Page
Relay contact interface	Operation manual	2/3

### 1-2) Relay contact circuit

Output layout on DIN 8-Pin plug

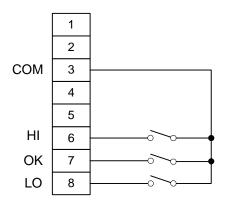

a-contacts for HI,OK & LO


Contact capacity

Maximum switching voltage: AC 50V

DC 30V

Maximum switching current: 500mA

## 1-3) Positioning of inductive load in the relay output circuit

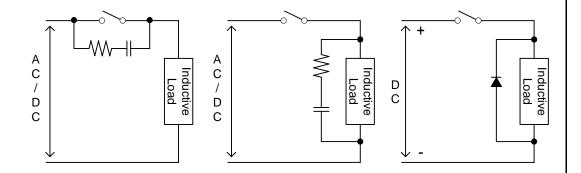

A spark quenching circuit shall be added when an inductive load is connected.

### 2. Function setting for Relay contact

As to details of function settings, refer to the operation manual of a balance. Function settings for relay contact is explained herein assuming the below conditions.

Setting conditions for relay contact function (assumed conditions)

- Constant judging
- Judging all areas including zero point
- Judging HI/OK/LO

Note: stands for factory setting.

#### 2-1) Operation of the limit function

Item	Set value		Description
Limit function 2.5	מ כ כ נ		Disable
	C. 3 C L.	1	Enable

## 2-2) Setting of judging conditions

	7 9 7 9 9					
	Item	Set value		Description		
			1	Constant judgment		
	Judging	2 (E a.		(Judging even when unstable)		
	conditions		2	Judging only when stable		
				(No judging when unstable)		

#### 2-3) Setting of Judgment range

, , , ,					
Item	Set value		Description		
Judgment	Judament	Π	Judging the range beyond +5 divisions (No judging less than +5 divisions or negative)		
range ZZL .		1	Judging all area (Judging all area including negative)		

#### 2-4) Setting of judgment points

Item	Set value		Description
Judgment	220.	1	Judging one point setting (OK/LO)
points Z J C I	2	Judging HI/OK/LO	

## 2-5) Setting of high and low limit values

As to this settings, refer to "Limit function" in the operation manual of a balance.